# blacklinesafety

The Loner Bridge System

## CONTENTS

About the devices Starting your shift During your shift Generating Manual Alerts Ending your shift Questions?


## ABOUT THE DEVICES

## HOW DO LONER BRIDGE & LONER 900 WORK TOGETHER?




The Loner Device is the monitor and the Bridge is the communicator.


## LONER BRIDGE COMPONENTS

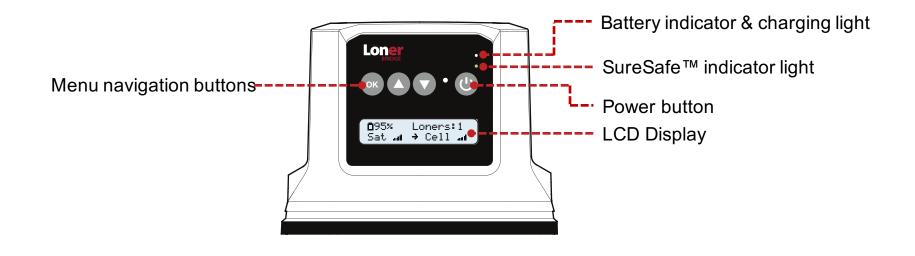

## LCD EXPLAINED

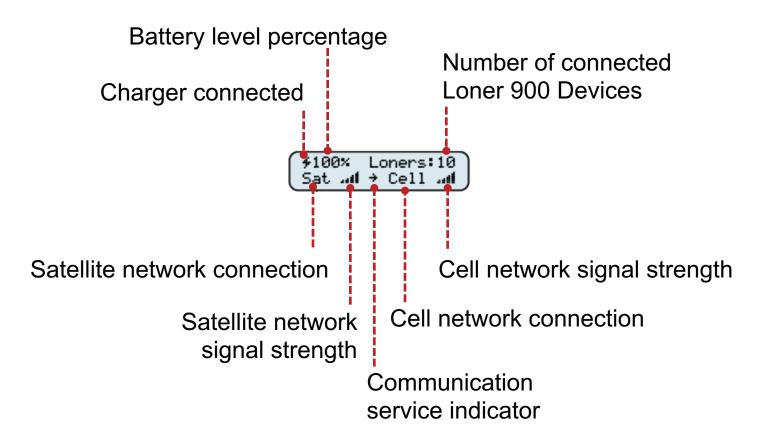

## LONER 900 COMPONENTS

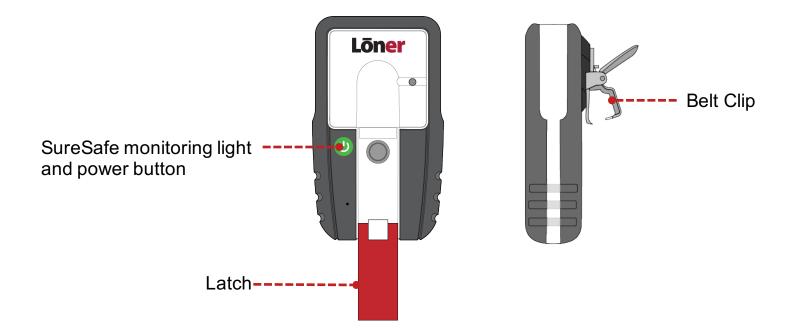

## STARTING YOUR SHIFT

## ALWAYS turn Loner Bridge on BEFORE turning on Loner 900





2

## TURNING ON YOUR LONER BRIDGE




Press the power button

The green SureSafe indicator light will flash while Loner Bridge connects to a network and the LCD will say "Searching..."

Once connected, the SureSafe monitoring light will be SOLID GREEN

Ensure the top of Loner Bridge has a clear view of the sky, especially if you are outside of cell coverage

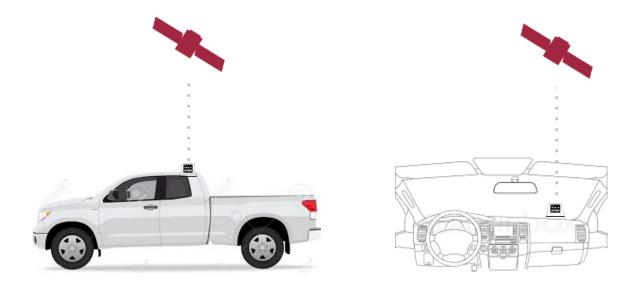

If the SureSafe indicator light on Loner Bridge is flashing, the device is not connected to the Blackline Safety Network and your safety is not monitored

## TURNING ON YOUR LONER 900




Press the power button

The green SureSafe light will blink until it is connected to the Blackline Safety Network.

Once connected, the light will be SOLID GREEN.


This means your safety is now monitored.

## WEARING YOUR LONER

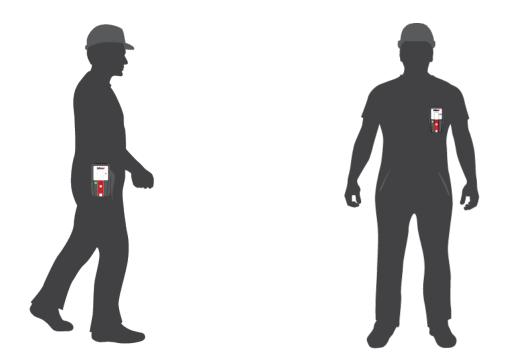

Clip the device to the side of your hip or to your chest pocket

#### Do not leave Loner unattended when powered on

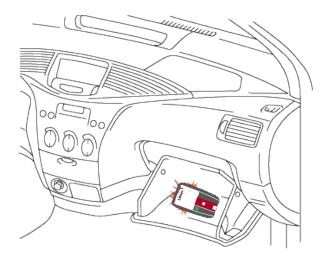

This can lead to false alerts

## DURING YOUR SHIFT


### AUTOMATIC FEATURES

#### During your shift, the device may ask you to confirm that you are OK when it detects one of the following:

No-motion

Fall detection

Check-in

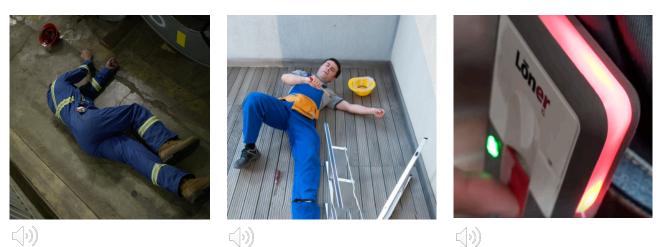

## PRE CHECK-IN




To do this, press and hold the latch for two vibrations. This will reset the check-in timer before the automatic alarm sounds.

Your device will automatically check you in if you are driving over 35 km/h.

## AUTOMATIC FEATURES – IF YOU'RE OK



### AUTOMATIC FEATURES – IF YOU CAN'T CONFIRM

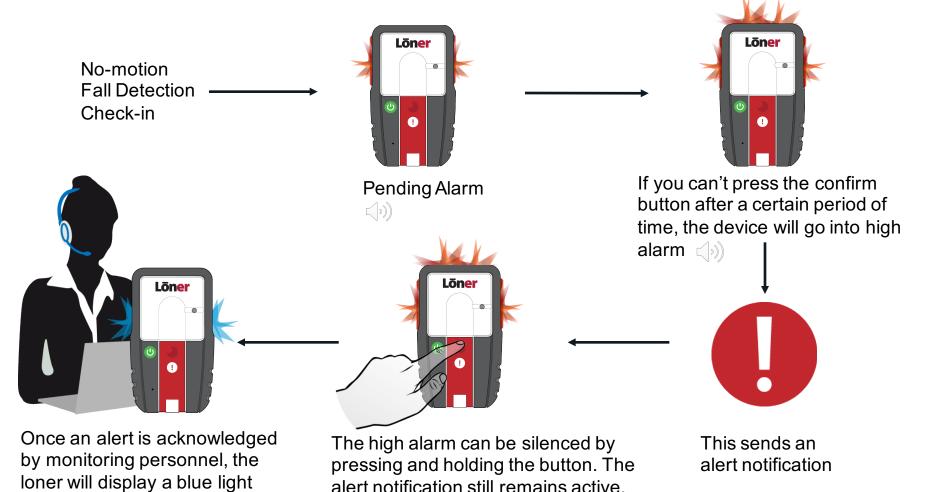


### MANUAL FEATURES

During your shift, you may need to request help using one of the manual features:

Emergency alert (Audible)


#### Silent alert

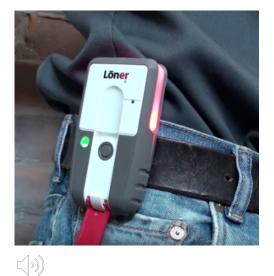



blacklinesafety

### **Emergency alert**

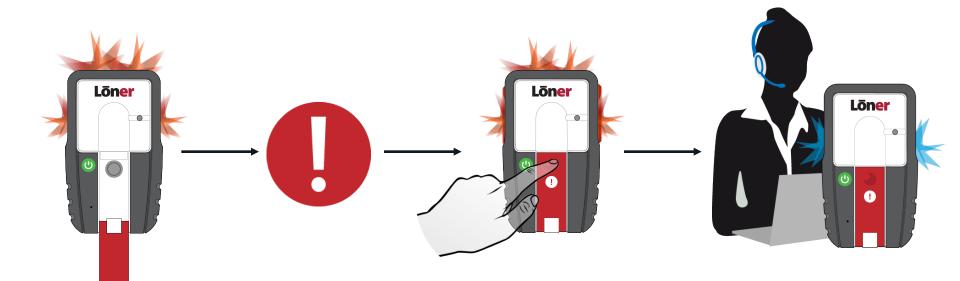


Request help by pulling down the latch

An alert notification will be sent to monitoring personnel The high alarm can be silenced by pressing and holding the button. The alert notification still remains active. Once an alert is acknowledged by monitoring personnel, the loner will display a blue light

### Silent Alert

(No audible or visual alarm is generated on the Loner device)

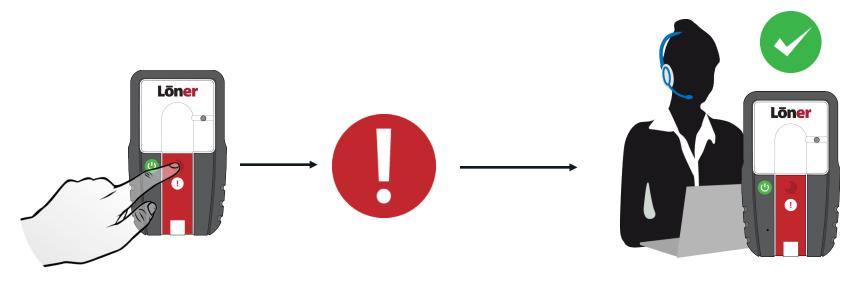


Press the confirm button until the vibration stops (two full vibration pulses ~5 sec.) An alert notification will be sent to monitoring personnel


No alert acknowledged blue light will be displayed on the device during a silent alert even if monitoring personnel have acknowledged the incident

## BRIDGE MESSAGING

The purpose of Bridge Text Messaging is for the device user to communicate to the monitoring personnel via their Bridge in areas where there is no cell service or cell phones are prohibited.

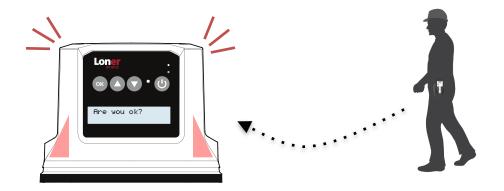

## WHAT HAPPENS WHEN YOU RECEIVE A MESSAGE

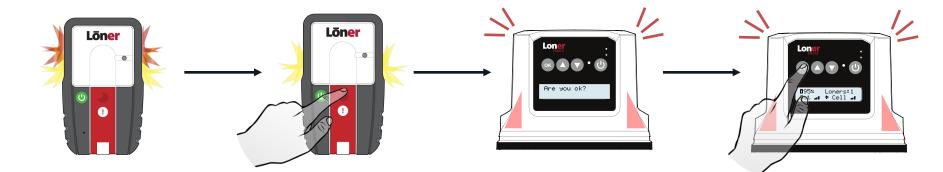


When Bridge receives a message your Loner 900 will muster

To silence your muster alarm press down on the latch for 3 seconds Return back to your Loner Bridge and check the LCD display for a message from Monitoring Personnel Ensure you read the message before moving to the next step

Silence your Bridge by pressing the OK button three times.


## **REPLYING TO A TEXT MESSAGE**

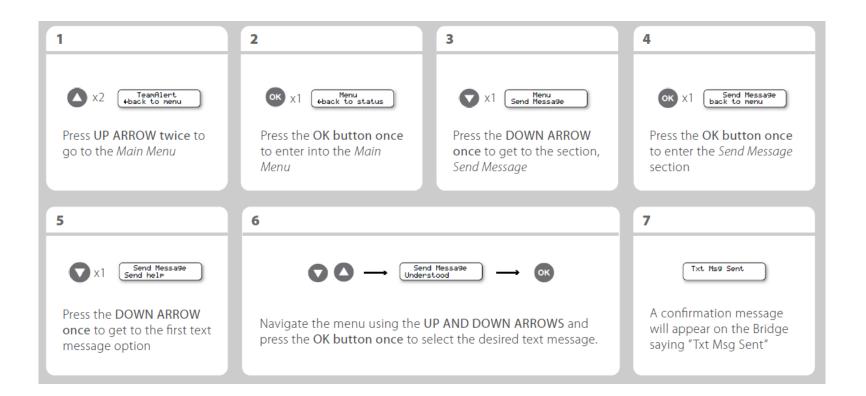

## BRIDGE MUSTERING

## STARTING A MUSTER FROM A BRIDGE

The purpose of the Muster is to call employees back to the Bridge

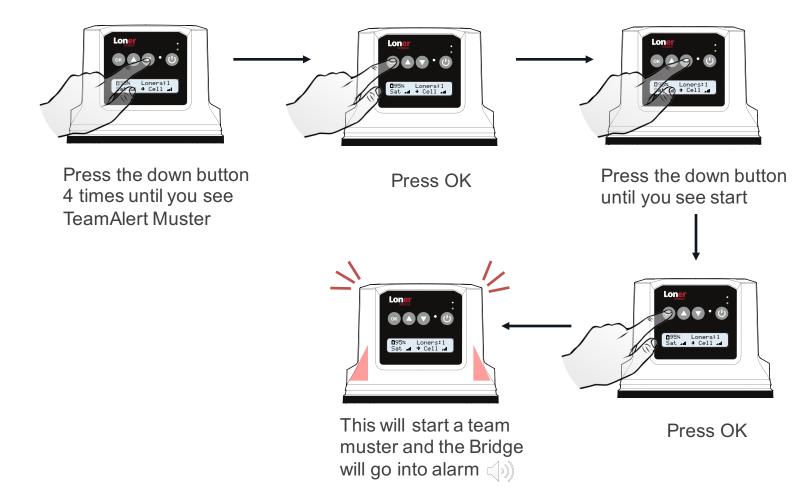


## RECEIVING A MUSTER ON THE LONER 900



When a muster is generated, your Loner 900 will display the muster alarm To silence your device, press and hold the latch for 3 seconds. Once silenced the device will display only the solid yellow light. Return back to your bridge

**(**))


## ENDING A MUSTER FROM A BRIDGE

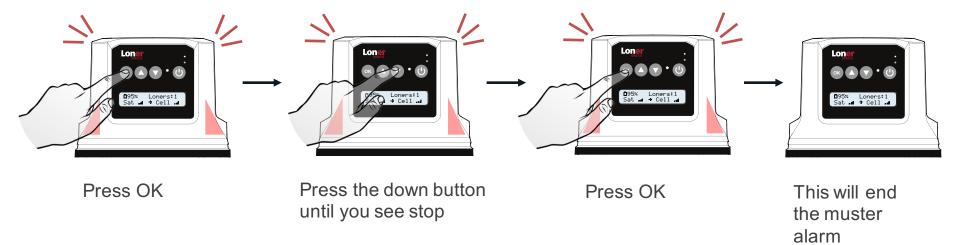

## NOTIFICATIONS

#### Link lost alarm

Your Loner 900 may be configured to notify you if it loses connection with Loner Bridge.

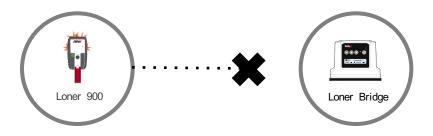

If configured, the device may initiate a LINK LOST ALARM, which is a characterized by a chirp every 5 minutes. If you hear this, head back to your Bridge.

Your Loner 900 SureSafe light will begin blinking to confirm that your safety is NOT being monitored

#### Low battery alarm

Your Loner device is configured to signal to you when the battery falls below a certain configured percentage



Low battery alarm is characterized by a short beep and a quick flash every 5 minutes. Charge your device as soon as possible.

())

## ENDING YOUR SHIFT

### TURNING OFF YOUR LONER DEVICE



Press the power button until beeping and vibration stops (usually 3 seconds)

The device will begin its shutdown sequence and the SureSafe light will flash and then turn off once your Loner logs off from the Blackline Safety Network. Your safety is no longer being monitored

### TURNING OFF YOUR LONER BRIDGE



Press the power button and hold for 3 seconds

The device will begin its shutdown sequence and the SureSafe light will flash and then turn off once your Loner logs off from the Blackline Safety Network.

## Always turn Loner 900 off Before turning off Loner Bridge



Loner Bridge cannot be powered down until the SureSafe light on the Loner 900 has stopped flashing


### CHARGING YOUR LONER 900

Full charge takes approx 3 hours Battery Life is 24 hours

Insert the charger into the bottom of the device and connect to power source

While the device is charging the red lights on the base will flash

Lõner

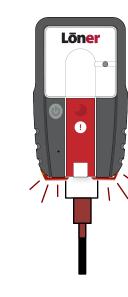

When Loner is charged, the red lights will turn on continuously.



## CHARGING YOUR LONER BRIDGE

Full charge takes approximately 8 hours Battery life is 50 hours

Insert the CHARGER into the bottom of the device and connect to power source While the device is CHARGING the top indicator light will flash RED When Loner Bridge is charged, the RED light will turn on continuously



#### **SUMMARY** 0 Turn your Loner ON Wait until green light is solid Į. Turn your Bridge ON **CLIP Loner to your HIP** blacklinesafety STARTING & ENDING YOUR SHIFT END SHIFT ₿ **}**" Charge Loner & Bridge -----0 Turn your Bridge OFF Loner OFF

#### bladding a blacklinesafety

## QUESTIONS?

# blacklinesafety

For more support materials, Please visit support.blacklinesafety.com

Customer Care: 1-877-869-7212